

LCD Display

Firstly, to determine the default settings for the radio. This is MOST likely how you will have the radio set in day-to-day use



Pressing the "B Button" on the left-hand side of the radio will change the LCD to look as below.

Type of Channel
A - Analogue

Active Transmit
Channel



Using the Channel Selector - You will now be able to change the Slot 2 channel. This channel needs to align with the Track channel in use - Most times it will be the "MANZ RX"

IMPORTANT: Leaving the radio will disable Transmit because the Active channel is set to a "Receive Only" Channel. You need to press the B-Button again to have the active channel move back to the top ST (Speedtech) channel.

Revision #1

Created 2026-05-12 20:48:24 UTC by Alan Scott

Updated 2026-05-12 21:30:04 UTC by Alan Scott