

Standby Channel Recieve Dissable

The radio can disable one of the channels. To disable a channel, ensure the channel that you want to disable is not the active channel. **You can change the active channel by pressing the B Button to toggle between them.**



Once you have the channel that you DON'T want to disable as the active channel, press the RED button on the front keypad.

Type of Channel
A - Analogue

Active Transmit
Channel



Using the Channel Selector - You will now be able to change the Slot 2 channel. This channel needs to align with the Track channel in use - Most times it will be the "MANZ RX"

Press the RED to disable the Receive on the standby channel.

Receive Dissabled



If you get a message saying the "Keypad is locked", you have 2 options to unlock it.



1. Turn the radio off, then on again - the keypad will be unlocked for 15 seconds on radio startup,
2. Use the Keypad to unlock the Keypad. This is done by pressing the Green button, then the * button. Once done, you should see a message on the screen saying "Keypad Unlocked"



Once unlocked, you can now press the RED button to disable the standby channel.

To enable - Press the red button again. The disabled marker should disappear.

Revision #2

Created 2026-05-12 21:31:15 UTC by Alan Scott

Updated 2026-05-12 22:30:35 UTC by Alan Scott